

Optics Cookbook No. 9

New Additions

High Laser Damage (HLD) for all Waveplate Programs, Zero and Multiple Order Waveplates

Waveplates Achromatic Waveplates Optical Assemblies Micro Optics Mini Lenses Lenses **Windows Hot and Cold Mirrors Filters and Coatings Polarizers Beamsplitters Prisms Optical Flats Transmission Flats Beam Expander Custom Optics**









Welcome to Tower Optical





Dear Customer,


I am pleased to present the ninth edition of our Optics Cookbook. We have expanded our line of waveplates and added High Laser Damage Waveplates for all diameters and designs, from 10 mm to 101.6 mm. Custom shapes can also be coated with our High Laser Damage Antireflection (HLD AR) coating.

Much of our business involves custom build-to-print optics and fulfilling OEM requests. Please feel free to contact us for a quotation regarding any requirement for precision optics you may have. We take pride in being able to offer you both a quick response to your request for quotations and, of course, a quality product with on-time delivery.

Yoany Rodriguez PhD, President / CEO

Products You Can Trust

Waveplates • Achromatic Waveplates • Lenses • Micro Lenses Prisms • Micro Prisms • Mirrors • Windows • Wedges • Polarizers Beamsplitters • Filters • Multiple Element Assemblies • Optical Flats **Build to Print Precison Optics**

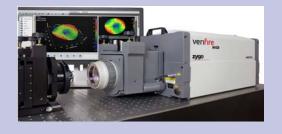

Waveplates

Standard waveplates are available in wavelengths from 248 nm to 2020 nm in 1/4 and 1/2 wave with 10 mm, 17.5 mm, 25.4 mm, 38.1 mm, and 50.8 mm diameters which include AR coating and optional mounting rings. Also available: square, rectangular and dual wavelength in sizes from 1 mm to 50 mm.

Achromatic waveplates in stock.

Also available are 3" and 4" diameter waveplates.

Thousandsin stock for immediate delivery

Custom Product and OEM Manufacturing

Tower Optical manufactures custom products and components that have been designed by its customers. We offer high quality, short lead time and low prices and custom optics.

Cage Code: 1N2U3

Micro Optics

Waveplates from 0.5 mm x 0.5 mm x 90 μ Prisms from 0.5 mm x 0.5 mm x 0.5 mm Lenses from 1 mm

Quality Control

Tower Optical technicians have the experience and equipment to produce optics to the most demanding specifications. Extensive testing ensures that all our products comply with exacting specifications and precise tolerances. ISO 9001:2015 certified.

Optical Coating Capabilities

V Coat AR coatings, Broad Band (BBAR) coatings for UV, visible, IR coatings and mirror coatings based on your custom requirements.

We produce components for:

OEM manufacturers • Major catalog distributors Research facilities • Colleges and universities Government contractors • National laboratories

Copyright © 2004, 2022 Tower Optical Corp.



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com







About Us / Table of Contents



Tower Optical Corporation is a premier manufacturer and producer of high quality precision optics and assemblies. Its stock and "build to spec" custom products are used in leading-edge photonics technology, electro-optics, lasers, telecommunications, medical instruments, optical imaging optical computing and Aerospace. Products include but are not limited to, crystal quartz waveplates and achromatic waveplates (retarders), lenses, filters, polarizers prisms, beamsplitters, windows, mirrors and transmission flats.

Tower is ISO certified for ISO 9001:2015.
 Tower prides itself on its short lead times, quality products and competitive pricing.

Our Team...

Founded in 1978, **Tower** has operated under its present ownership since 1997. Its customers represent a broad variety of national and international companies and industries including military, aircraft, aerospace, medical, process measurement and control, university researchers and key U.S. Department of Defense contractors. **Tower** is registered with the U.S. State Department to obtain export licenses as required.



Vision — To be the supplier of choice for the most demanding and innovative organizations who are focused on improving man's quality of life through the use of light based technologies.

Mission — To find cost effective solutions and provide customers with quality optical products and services in a timely manner.

Quality — Tower technicians have the experience, skill and equipment to design and manufacture products to the most demanding specifications. The company's extensive testing equipment ensures that all products are shipped to exacting specifications.

Service — In addition to the large inventory of products for immediate shipment, Tower welcomes custom orders and working with customer's engineers to develop prototypes and OEM manufactured products that will meet special needs.

Pricing — Tower's manufacturing techniques coupled with a constant focus to contain overhead enables us to offer prices that are the most competitive in the industry. Discounts are offered for larger quantity orders.

Call, fax or e-mail your requirements for special price consideration.

Table of Contents	
Zero Order Waveplates	4-11
Multiple Order Waveplates All Sizes	12
Achromatic Waveplates	13-15
Waveplate Ordering Information	17
Precision Optical Flats	18
Transmission Flats 4" and 6"	19
Beam Expander 4" to 6"	20
Microprisms - Coated and Uncoated	21
Large Right Angle Prism	22-23
Beamsplitters	24
Optical Filters and Coatings	25
Hot and Cold Mirrors	26
Windows and Mirrors	27
Lenses - Custom and Cylindrical	28
Ball and Drum Lenses	29
Plano Lenses	30-32
Bi Convex	33
Mini Lenses	
Large Optics and Assemblies	
Mounting Rings	36
ISO Certificate	37








561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3







Zero Order Waveplates-10 mm



Tower's 10 mm zero order waveplates provide users with a high performance crystal quartz retarder with a clear aperture of 8 mm. These waveplates are air spaced, having a stainless steel spacer between two crystal quartz plates that form the zero order capability. Zero order waveplates are far less sensitive to temperature variations than mulitple orders. Air spaced waveplates have higher thermal stability and power handling capability than contacted or cemented. They are no failures as occur with contacted waveplates coming apart. Angular alignment of the waveplates is also more accurate.

Tower Optical standard 10 mm waveplates are made from laser quality crystal quartz and are AR coated. Each plate is AR

Waveplate Specifications

Material: crystal quartz – laser quality Waveplate thickness range: 0.3 to 2.0 mm *Wavefront distortion:* $\lambda/10 @ 632.8 \text{ nm}$

Surface quality: 10-5 Scratch-Dig **Parallelism (wedge):** 0.5 arc seconds **Wavelength range:** per table to the right

Retardation tolerance: ±0.005 waves @ 632.8 nm **Coating:** anti reflective, R<0.25% per surface **Damage threshold:** 1 kW/cm2 – CW, 3.5 J/cm2 @10 ns **Diameter:** 10 mm, +0.0/-0.25 mm unmounted; 12.7

or 25.4 mm, +0.00/-0.25 mm mounted

Cage Code: 1N2U3

Mounted thickness: 6.4 (12.7 mm) or 7.8 (25.4 mm)

See Page 17 for Waveplate Ordering Information

Clear aperture 85% OD

- 10 mm unmounted diameter
- 12.7 or 25.4 mm mounted diameter
- Wide range of wavelengths
- ½ and ¼ wave retardation
- Waveplates are AR coated
- Very high laser quality
- High performance specifications

coated on both sides. Standard retardations are ½ or ¼ wave. The waveplates are offered either unmounted with a diameter of 10 mm or mounted in a 12.7 mm or 25.4 mm, anodized aluminum mounting ring with an 8mm clear aperture.

The standard wavelengths available are shown in the chart below. As a special feature, Tower offers the ability to supply the 10 mm zero order waveplates at wavelengths within a range of 10-20 nm from any of those listed on the chart. Other wavelengths are available on a custom order basis.

Standard Wavelengths

237	248	266	280	308	325	355
369	377	399	400	408	413	423
442	455	458	488	514.5	527	532
556	589	632.8	647	650	660	670
676	694	710	752	755	767	780
790	795	800	808	810	825	830
850	880	905	940	980	1030	1047
1053	1064	1112	1156	1228	1310	1319
1476	1550	1570	1762	1980	1988	2020

See Page 12 for Any Wavelength Program

Ordering Information

Unmounted

Z-10-A-R-N-WL

Mounted in a 12.7 mm ring

Z-10-A-R-A-WL

Mounted in a 25.4 mm ring

Z-10-A-R-B-WL

R = Retardation: .500 or .250, WL = Wavelength



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com











Zero Order Waveplates-12.7 mm



Tower's 12.7 mm zero order waveplates provide users with a high performance crystal quartz retarder with a clear aperture of 10 mm. These waveplates are air spaced, having a stainless steel spacer between two crystal quartz plates that form the zero order. These waveplates are far less sensitive to temperature variations than mulitple orders. Air spaced waveplates have higher thermal stability and power handling capability than contacted or cemented. There are no failures as occur with contacted waveplates coming apart. Angular alignment of the waveplates is also more accurate.

Tower Optical standard 12.7 mm waveplates are made from laser quality crystal quartz and are AR coated. Each plate is

Waveplate Specifications

Material: crystal quartz – laser quality

Waveplate thickness range: 0.3 to 2.0 mm *Wavefront distortion:* $\lambda/10 @ 632.8 \text{ nm}$

Surface quality: 10-5 Scratch-Dig **Parallelism (wedge):** 0.5 arc seconds **Wavelength range:** per table to the right

Retardation tolerance: ±0.005 waves @ 632.8 nm **Coating:** anti reflective, R<0.25% per surface **Damage threshold:** 1 kW/cm2 – CW, 3.5 J/cm2 @10 ns *Diameter:* 12.7 mm, +0.0/-0.25 mm unmounted;

25.4 mm, +0.00/-0.25 mm mounted

Cage Code: 1N2U3

Mounted thickness: 6.4 (12.7 mm) or 7.8 (25.4 mm)

See Page 17 for Waveplate Ordering Information

Clear aperture 85% OD

- 12.7 mm unmounted diameter
- 25.4 mm mounted diameter
- Wide range of wavelengths
- ½ and ¼ wave retardation
- Waveplates are AR coated
- Very high laser quality
- High performance specifications

AR coated on both sides. Standard retardations are 1/2 or 1/4 wave. The waveplates are offered either unmounted with a diameter of 12.7 mm or mounted in a 25.4 mm, anodized aluminum mounting ring with an 10 mm clear aperture.

The standard wavelengths available are shown in the chart below. As a special feature, Tower offers the ability to supply the 12.7 mm zero order waveplates at wavelengths within a range of 10-20 nm from any of those listed on the chart. Other wavelengths are available on a custom order basis.

Standard Wavelengths

237	248	266	280	308	325	355
369	377	399	400	408	413	423
442	455	458	488	514.5	527	532
556	589	632.8	647	650	660	670
676	694	710	752	755	767	780
790	795	800	808	810	825	830
850	880	905	940	980	1030	1047
1053	1064	1112	1156	1228	1310	1319
1476	1550	1570	1762	1980	1988	2020
790 850 1053	795 880 1064	800 905 1112	808 940 1156	810 980 1228	825 1030 1310	104 131

See Page 12 for Any Wavelength Program

Ordering Information

Unmounted

Z-12.7-A-R-N-WL

Mounted in a 25.4 mm ring

Z-12.7-A-R-B-WL

R = Retardation: .500 or .250, WL = Wavelength



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com







Zero Order Waveplates-17.5 mm



Tower's 17.5 mm zero order waveplates provide users with a high performance crystal quartz retarder with a clear aperture of 15 mm. These waveplates are air spaced, having a stainless steel spacer between two crystal quartz plates that form the zero order capability. Zero order waveplates are far less sensitive to temperature variations than multiple orders. Air spaced waveplates have higher thermal stability and power handling capability than contacted or cemented. They are no failures as occur with contacted waveplates coming apart. Angular alignment of the waveplates is also more accurate.

Tower Optical waveplates are made from laser quality crystal quartz. Each plate is AR coated on both sides. Standard

- Clear aperture 85% OD
- 17.5 mm unmounted diameter
- 1" (25.4 mm) mounted diameter
- Wide range of wavelengths
- ½ and ¼ wave retardation
- Waveplates are AR coated
- Very high laser quality
- High performance specifications
- Most Popular design

retardations are ½ or ¼ wave. The waveplates are offered either unmounted with a diameter of 17.5 mm or mounted in a 25.4 mm anodized aluminum mounting ring with a 15 mm clear aperture.

The standard wavelengths available are shown in the chart below. As a special feature, Tower offers the ability to supply these zero order waveplates at wavelengths within a range of 10-20 nm from any of those listed on the chart. Other wavelengths are available on a custom order basis.

Waveplate Specifications

Material: crystal quartz – laser quality Waveplate thickness range: 0.3 to 2.0 mm *Wavefront distortion:* $\lambda/10 @ 632.8 \text{ nm}$

Surface quality: 10-5 Scratch-Dig Parallelism (wedge): 0.5 arc seconds Wavelength range: per table to the right

Retardation tolerance: ±0.005 waves @ 632.8 nm **Coating:** anti reflective, R<0.25% per surface **Damage threshold:** 1 kW/cm2 – CW, 3.5 J/cm2 @10 ns

Diameter: 17.5 mm, +0.0/-0.25 mm unmounted; 25.4 mm, +0.00/-0.25 mm mounted

Mounted thickness: 7.8, +0.00/-0.25 mm

See Page 17 for Waveplate Ordering Information

Standard Wavelengths

237	248	266	280	308	325	355
369	377	399	400	408	413	423
442	455	458	488	514.5	527	532
556	589	632.8	647	650	660	670
676	694	710	752	755	767	780
790	795	800	808	810	825	830
850	880	905	940	980	1030	1047
1053	1064	1112	1156	1228	1310	1319
1476	1550	1570	1762	1980	1988	2020

See Page 12 for Any Wavelength Program

Ordering Information

Unmounted Z-17.5-A-R-N-WL

Mounted in a 25.4 mm ring

ITAR Compliant

Z-17.5-A-R-B-WL

R = Retardation: .500 or .250, WL = Wavelength







561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3 ISO 9001: 2015 Certified



NEW

High Laser Damage (HLD) **Zero Order Waveplates**

"Now all Diameters and Designs"





Tower's 17.5 mm HLD zero order waveplates provide users with a high performance crystal quartz retarder with a clear aperture of 90% OD. These waveplates are air spaced, having a stainless steel spacer between two crystal quartz plates that form the zero order capability.

Zero order waveplates are far less sensitive to temperature variations than multiple orders. Air spaced waveplates have higher thermal stabilityand power handling capability than contacted or cemented. There are no failures as occur with contacted waveplates coming apart. Angular alignment of the waveplates is also more accurate. Tower Optical waveplates are made from laser quality crystal quartz. Each HLD plate is AR coated on b oh sides to exhibit High Laser Damage Threshold with

Waveplate Specifications

Material: crystal quartz – laser quality

Waveplate thickness range: 0.3 to 2.0 mm

Wavefront distortion: λ/10 @632.8 nm

Surface quality: 10/5 up to 38.1 mm: 20/40 up to 101.6 mm

Parallelism (wedge): 1.0 arc seconds **Wavelength range:** per table to the right

Retardation tolerance: ±0.005 waves @632.8 nm

Coating: anti reflective, R<0.25% per surface

Damage threshold: 1 MW/cm2 – CW, 20 Jcm2@10 ns

Diameter: 10.0 to 10.1.6 mm +0.0/-0.25 mm unmounted;

Mounted thickness: 7.8, +0.00/-0.25 mm

Clear aperture 85% OD

- 10 to 101.6 mm unmounted diameter
- Mounted version available
- Wide range of wavelengths
- ½ and ¼ wave retardation
- Waveplates are AR coated
- Very high laser quality
- High performance specifications
- High Laser Damage Coating

retardations that are $\frac{1}{2}$ or $\frac{1}{4}$ wave. The waveplates are offered either unmounted with a diameter of 17.5 mm or mounted in a 25.4 mm anodized aluminum mounting ring with a 15 mm clear aperture.

The standard wavelengths available are shown in the chart below. As a special feature, Tower offers the ability to supply these zero order waveplates at wavelengths within a range of 10–20 nm from any of those listed on the chart. Other wavelengths are available on a custom order basis.

Standard Wavelengths

355 408 532 800 1030 1064

Custome Wavelengths are available for HDL Waveplates

Ordering Information

Unmounted

Z-17.5-A-R-N-WL-H

Mounted in a 25.4 mm ring

Z-17.5-A-R-B-WL-H

R = Retardation: .500 or .250, WL = Wavelength

"For other diameters and design call for pricing".

See Page 17 for Waveplate Ordering Information







561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3

ISO 9001: 2015 Certified







Zero Order Waveplates-1" (25.4 mm) OPTICAL CORPORATION



Tower's 1" Zero Order Waveplates provide users with a high performance crystal quartz retarder with a clear aperture of 23 mm. These waveplates are air spaced, having a stainless steel spacer between two crystal quartz plates that form the zero order capability. Zero order waveplates are far less sensitive to temperature variations than multiple orders. Air spaced waveplates have higher thermal stability and power handling capability than contacted or cemented. They are no failures as occur with contacted waveplates coming apart. Angular alignment of the waveplates is also more accurate.

Tower Optical's standard 1" waveplates are made from laser quality crystal quartz and are AR coated. Each plate

Waveplate Specifications

Material: crystal quartz – laser quality

Waveplate thickness range: 0.3 to 2.0 mm *Wavefront distortion:* $\lambda/10 @ 632.8 \text{ nm}$

Surface quality: 10-5 Scratch-DigParallelism (wedge): 0.5 arc secondsWavelength range: Per table to the right

Retardation tolerance: ±0.005 waves @ 632.8 nm **Coating:** Anti Reflective, R<0.25% per surface **Damage threshold:** 1 kW/cm2 – CW, 3.5 J/cm2 @10 ns **Diameter:** 25.4 mm, +0.0/-0.25 mm unmounted; 30 mm, +0.00/-0.25 mm mounted

30 mm, +0.00/-0.25 mm mounted **Mounted thickness:** 6.0, +0.00/-0.25 mm

See Page 17 for Waveplate Ordering Information

Cage Code: 1N2U3

• Clear aperture 85% OD

- 25.4 mm unmounted diameter
- 30 mm mounted diameter
- Wide range of wavelengths
- ½ and ¼ wave retardation
- Waveplates are AR coated
- Very high laser quality
- High performance specifications

is coated on both sides. Standard retardations are ½ or ¼ wave. The waveplates are offered either unmounted with a diameter of 25.4 mm or mounted in a 30 mm anodized aluminum mounting ring with a 23 mm clear aperture.

The standard wavelengths available are shown in the chart below. As a special feature, Tower offers the ability to supply the 1" zero order waveplates at wavelengths within a range of 10–20 nm from any of those listed on the chart. Other wavelengths are available on a custom order basis.

Standard Wavelengths

266	355	408	423
488	514.5	532	632.8
650	670	780	800
830	980	1064	1550

See Page 12 for Any Wavelength Program

Ordering Information

Unmounted

Z-25.4-A-R-N-WL

Mounted in a 30 mm ring

Z-25.4-A-R-C-WL

R = Retardation: .500 or .250, WL = Wavelength



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com







Large Zero Order Waveplates – 38.1 & 50.8 mm





- Laser quality crystal quartz
- Air spaced for high power
- Clear aperture 85% OD
- Mounted or unmounted
- Retardations of 1/2 and 1/4 wave
- Waveplates are AR coated
- High performance specifications

Tower's large aperture zero order waveplates provide users with the capability of handling new applications where beam size and/or beam position moves over larger distances. The waveplates described here are air spaced, having a stainless steel spacer between two crystal quartz plates that form the zero order capability. Zero order waveplates are far less sensitive to temperature variations than multiple orders. Air spaced waveplates have higher thermal stability and power handling capability than contacted or cemented.

Tower Optical large waveplates are made from laser quality crystal quartz. Each plate is AR coated on both sides. Retardations are ½ or ¼ wave. The waveplates are offered either unmounted or mounted in anodized aluminum mounting rings.

Waveplate Specifications

Material: crystal quartz – laser quality *Waveplate thickness range:* 3 to 4 mm

Wavefront distortion: $\lambda/8 @ 632.8 \text{ nm}$ *Surface*

quality: 40-20 Scratch-Dig

Parallelism (wedge): 0.5 arc seconds **Wavelength range:** Per table to the right

Retardation tolerance: ±0.005 waves @ 632.8 nm **Coating:** Anti Reflective, R<0.25% per surface **Damage threshold:** 1 kW/cm2 – CW, 3.5 J/cm2 @10 ns

Diameter: 38.1 mm, +0.0/-0.25 mm unmounted;

50.8 mm, +0.0/-0.25 mm mounted, or, 50.8 mm, +0.0/-0.25 mm unmounted, 76.2 mm +0.0/-0.25 mm mounted

Mounted thickness: 9.0, +0.00/-0.25 mm

See Page 17 for Waveplate Ordering Information

Standard Wavelengths (nm)

355 532 632.8 800 1064 1550

See Page 12 for Any Wavelength Program

Ordering Information

38.1 mm WP Unmounted

Z-38.1-A-R-N-WL

38.1 mm WP Mounted in a 50.8 mm ring

Z-38.1-A-R-E-WL

50.8 mm WP Unmounted

Z-50.8-A-R-N-WL


50.8 mm WP Mounted in 76.2 mm ring

Z-50.8-A-R-G-WL

R = Retardation: .500 or .250,

WL = Wavelength





Cage Code: 1N2U3 ITAR Compliant







A new option in zero order waveplates has been established by Tower Optical - a 3" custom zero order waveplate. This super large zero order waveplate provides users with the ability to perform new techniques with large beam lasers. In addition, these waveplates are air spaced thus providing operation at higher power levels than contacted or cemented waveplates. Standard retardations of 1/4 and 1/2 wave are provided for each wavelength offered.

You can custom order the wavelength you desire from 355nm to 2021nm.

The mounting ring for the three inch zero order waveplate is heavy duty Aluminum, 4 inch diameter and 7/8 inch thick to protect the dual plate Crystal Quartz waveplate. The crystal axis is shown as a scribe mark on the face of the ring. The waveplate is held in place with a retaining ring.

Super Large Zero Order Waveplates – 76.2mm

- Laser Quality Crystal Quartz
- Air Spaced for High Power
- Clear aperture 85% OD
- Mounted or Unmounted
- Retardations of 1/2 and 1/4 Wave
- Waveplates are AR Coated
- Standard Wavelengths
- Custom Wavelengths available
- Rugged 4" Mounting Ring

Waveplate Specifications

Material: Crystal Quartz – Laser quality Waveplate Thickness Range: 4.0 to 10mm Wavefront Distortion: λ /8 @ 632.8nm Surface Quality: 20-10 Scratch/Dig **Parallelism (Wedge):** 0.5 arc seconds

Wavelengths: Specify from 355 nm to 2021 nm. **Retardation Tolerance:** ±0.005 waves @ 632.8nm **Coating:** Anti Reflective, R<0.25% per surface **Damage Threshold:** 1kW/cm² – CW 3.5 J/cm² @10ns

Diameter: 76.2, +0.0/-0.25mm unmounted; 101.6, +0.00/-0.25mm mounted

Mounted Thickness: 24mm

Ordering Information

Unmounted

Z-76.2-A-R-N-WL

Mounted in a 4 inch ring

Z-76.2-A-R-H-WL

R=Retardation: 250 or .500, WL=Wavelength Custom wavelengths are available. Lead times will vary depending on current inventory and customer demand.

Please call for pricing.



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3

ITAR Compliant









ISO 9001: 2015 Certified

Super Large

4" Zero Order Waveplates – 101.6mm





Super Large Zero Order Waveplates – 101.6mm

- Laser Quality Crystal Quartz
- Air Spaced for High Power
- Clear aperture 85% OD
- Mounted or Unmounted
- Retardations of 1/2 and 1/4 Wave
- AR Coated
- All Wavelengths Custom
- Rugged 4.5" Mounting Ring

Tower Optical is now offering super large zero order waveplates that are 101.6mm in diameter. In addition, these Waveplaes are air spaced, thus providing operation at higher power levels than contacted or cemented Waveplaes.

These large Waveplates are available with 1/4 and 1/2 wave retardation. You can custom order the wavelength you desire from 355nm to 2021nm.

The mounting ring for the 4" Zero Order Waveplate is made of heavy duty Aluminum, 4.5" diamter and 7/8" thick to protect the dual plate Crystal Quartz Waveplate assembly. The optical axis is shown by a scribe mark on the face of the ring. The Wareplate is held in place with a retaining ring. Custom designed rings are also available, or the 4" Waveplate can be supplied unmounted.

Waveplate Specifications

Material: Crystal Quartz – Laser quality Waveplate Thickness Range: 4.0 to 10mm Wavefront Distortion: λ /8 @ 632.8nm Surface Quality: 20-10 Scratch/Dig

Parallelism (Wedge): 0.5 arc seconds

Wavelengths: Specify from 355nm to 2021nm **Retardation Tolerance:** ±0.005 waves @ 632.8nm **Coating:** Anti Reflective, R<0.25% per surface

IBS Lo R, Hi Pwr, optional

Damage Threshold: 1MW/cm² – CW 10 J/cm² @10ns **Diameter:** 101.6, +0.0/-0.25mm unmounted;


114.3, +0.00/-0.25mm mounted

Mounted Thickness: 24mm

Ordering Information

Z-101.6-A-Ret-J/U-Wavelenth (3 or 5 digits nm) Ret=.250 or .500; J=4.5" mount, U=unmounted Lead times will vary depending on current inventory and customer demand.





Cage Code: 1N2U3 ISO 9001: 2015 Certified









- Any wavelength waveplates
- Laser quality
- 1/2 and 1/4 wave retardation
- Optical axis marked on mounted and unmounted waveplates
- All waveplates are AR coated
- Custom sizes and shapes available
- Simple ordering selection

Any Wavelength Waveplate Program

Virtually any wavelength waveplate in now available in a matter of days compared to making a custom production run, which takes 8 weeks. Until now the waveplates were offered in over about 60 different wavelengths between 248 nm and 2021 nm. The waveplates can now be ordered at any wavelength between 248 nm and 2020 nm. This range represents 95% of current requests. This new approach optimizes a customer's system performance since he/she is not concerned with retardation errors from the use of an off the shelf near wavelength waveplate.

This new technique is available to our Zero Order product line at either ½ wave or ¼ wave retardation. All four surfaces are AR (Anti-Reflection) coated, and the assembly offered mounted or unmounted.

All of these waveplates sell for the same low prices as our standard items. Any-Wavelength Waveplates are normally available within 3-5 business days.

Use our Standard Part Number (see page 16) and merely insert your desired wavelength.

Cage Code: 1N2U3

General Product Description

Zero order waveplates are constructed of two crystal quartz plates that are oriented so that the optical axes are orthogonal. Our standard waveplates are air spaced; cemented and contacted versions are also available. Zero order waveplates are far less sensitive to temperature changes than multiple orders.

Tower Optical standard waveplates are laser quality crystal quartz which are AR coated. **Other wavelengths and custom dimensions are available on a special order basis.**

Our standard waveplates are available in 10 mm, 17.5 mm, 25.4 mm, 38.1 mm and 50.8 mm diameter in a variety of different mounts or unmounted.



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

liant







Multiple Order Waveplates – All Sizes

"Now HLD Coating Available per customer request"





- Laser quality crystal quartz
- Clear aperture 85% OD
- Mounted or unmounted
- Retardations of 1/2 and 1/4 wave
- Waveplates are AR coated
- High performance specifications

Tower's multiple order waveplates comprise a single piece of laser quality crystal quartz. Because their retardation is the desired fraction ($\lambda/4$, $\lambda/2$) plus some integer number of waves, they are many times more sensitive to temperature and wavelength than zero order waveplates. Therefore they perform well only in laboratory environments and in monochromatic light.

Tower Optical multiple order waveplates are AR coated on both sides. Standard retardations are $\lambda/4$ and $\lambda/2$; other values are available upon request. They are offered either unmounted or mounted in an anodized aluminum ring.

Wavelengths Available

237	248	266	280	308	325	355
369	377	399	400	408	413	423
442	455	458	488	514.5	527	532
556	589	632.8	647	650	660	670
676	694	710	752	755	767	780
790	795	800	808	810	825	830
850	880	905	940	980	1030	1047
1053	1064	1112	1156	1228	1310	1319
1476	1550	1570	1762	1980	1988	2020

Waveplate Specifications

Material: crystal quartz – laser quality *Waveplate thickness range:* 0.3 to 2 mm *Wavefront distortion:* $\lambda/10 @ 632.8 \text{ nm}$

Surface quality: 10-5 Scratch-DigParallelism (wedge): 0.5 arc secondsWavelength range: Per table to the right

Retardation tolerance: ±0.005 waves @ 632.8 nm **Coating:** Anti Reflective, R<0.25% per surface **Damage threshold:** 1 kW/cm2 – CW, 3.5 J/cm2 @10 ns

Diameter: 10, 12.5, 17.5, 25.4, 38.1 and 50.8 mm, +0.0/-0.25 mm unmounted; or mounted

in appropriate sized mounting rings

Mounted thickness: Depends on mount diameter

Ordering Information

WP Unmounted example for 17.5 mm Dia

M-17.5-D-R-N-WL

WP Mounted in a 25.4 mm ring

M-17.5-D-R-B-WL

WP Unmounted example for 25.4 mm Dia

M-25.4-D-R-N-WL

WP Mounted in a 30 mm ring

M-25.4-D-R-C-WL

R = Retardation: .500 or .250, WL = Wavelength


Dual Wavelength Waveplates Available

See Page 17 for Waveplate Ordering Information









Cage Code: 1N2U3

ISO 9001: 2015 Certified







Achromatic Waveplates – Cemented



Tower Optical offers this second series of Achromatic Waveplates (AWP's) which are built using 25.4 mm substrates of crystal quartz and magnesium fluoride. These substrates are cemented together. This technique helps to control costs by reducing the number of surfaces requiring AR coating while increasing the physical size thus accommodating larger beam diameters. As with the original series of AWPs these AWPs are available in the following ranges:

> VIS 465 to 610 nm VIS/NIR 610 to 850 nm NIR 700 to 1000 nm 1200 to 1650 nm

Each is broadband AR coated for its respective range. The retardation performance is shown graphically on the page "Achromatic Waveplates - Retardation Curves".

See Retardation Curves on Page 15

Cage Code: 1N2U3

Ordering Information

Unmounted version

A-25.4-B-R-N X

Mounted version A-25.4-B-R-C-X

R = Retardation, .250 or .500

X = Wavelength range, 1, 2, 3 or 4

Low retardation variations

- Four broad spectral ranges
- Cemented construction
- Clear aperture 85% OD
- Unmounted diameter of 25.4 mm
- Mounted in a 30 mm ring
- Retardations of ½ and ¼ wave

Waveplate Specifications

Substrate material: crystal quartz & MgF2

Retardance: $\lambda/4$ and $\lambda/2$

Retardation tolerance: $\lambda/100$ over wavelength

range *Clear aperture:* 85% OD

Temp coefficient of retardation: $< \lambda/500$ per °C **Wavelength ranges:** 1 = 465-610 nm, 4 = 610-850 nm, 2 = 700-1000 nm, 3 = 1200-1650 nm

Transmitted wavefront distortion: $\lambda/4@633$ nm

Surface quality: 20-10 Scratch-Dig Beam deviation: <1 arc minute **Parallelism:** <1 arc minute

AOI range for < 1% change in retardance: +/-3° **Optical axis:** Marked on the mounting ring **Temperature storage range:** -40°C to +75°C Damage threshold: 2J/cm2 (8 ns pulse @ 1064 nm);

500 kW/cm2, CW

Diameter mounted: 30 mm

Ring thickness: 6 mm

Coating: Ravg<1% at 465-610 nm per surface

Ravg<0.7% at 610-850 nm per surface Ravg<0.6% at 700-1000 nm per surface Ravg<0.5% at 1200-1650 nm per surface

See Page 17 for Waveplate Ordering Information

ITAR Compliant



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com











Achromatic Waveplates – Air Spaced



- Low retardation variations
- Four broad spectral ranges
- Air spaced for high power
- Clear aperture 85% OD
- Mounted in a 25.4 mm ring
- Retardations of ½ and ¼ wave

Tower's achromatic waveplate (AWP) is similar to a zero-order waveplate, which is made from two pieces of crystal quartz except that the AWP is composed of one piece of crystal quartz and one piece of magnesium fluoride, MgF2. Both of these materials are birefringent, however, by proper matching of the birefringent changes of the two materials, retardation changes are minimized as the wavelength changes. This phenomenon produces a waveplate whose change in retardation is extremely small for large variations in wavelength.

For tunable sources or lasers with large spectral widths, you'll want an AWP – one whose performance is nearly independent of wavelength.

Tower's AWPs are designed to effectively eliminate the wavelength dependence over a wide spectral range, typically several hundred nanometers. The AWPs are available for four wavelength ranges: 465-610 nm (VIS), 610-850 nm (VIS/NIR), 700-1000 nm (NIR), and 1200-1650 nm (IR.) These AWPs operate beyond these ranges; however the retardation change exceeds the specification. The standard versions are air-spaced. Custom AWPs are available to meet your specific requirements. Send us your drawing for a quote on a custom AWP.

Ordering Information

A-12.7-A-R-B-X

R = Retardation, .250 or .500

X = Wavelength range, 1, 2, 3 or 4

Waveplate Specifications

Substrate material: crystal quartz & MgF2

Retardance: $\lambda/4$ and $\lambda/2$

Retardation tolerance: $\lambda/100$ over wavelength

range Clear aperture: 85% OD

Temp coefficient of retardation: $< \lambda/500 \text{ per } ^{\circ}\text{C}$ **Wavelength ranges:** 1 = 465-610 nm, 4 = 610-850 nm, 2 = 700-1000 nm, 3 = 1200-1650 nm**Transmitted wavefront distortion:** $\lambda/4@633 \text{ nm}$

Surface quality: 20/10 scratch dig

Beam deviation: 0.5" **Parallelism:** <1 arc minute

AOI range for < 1% change in retardance: +/-3° Optical axis: Marked on the mounting ring
Temperature storage range: -40°C to +75°C
Damage threshold: 2J/cm2 (8 ns pulse @ 1064 nm);

500 kW/cm2, CW

Diameter mounted: 25.4 mm **Ring thickness:** 8 and 9 mm

Coating: Ravg<1% at 465-610 nm per surface Ravg<0.7% at 610-850 nm per surface

Ravg<0.6% at 700-1000 nm per surface Ravg<0.5% at 1200-1650 nm per surface

See Retardation Curves on Page 15

See Page 17 for Waveplate Ordering Information







561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com


Cage Code: 1N2U3






Achromatic Waveplates – Retardation Curves



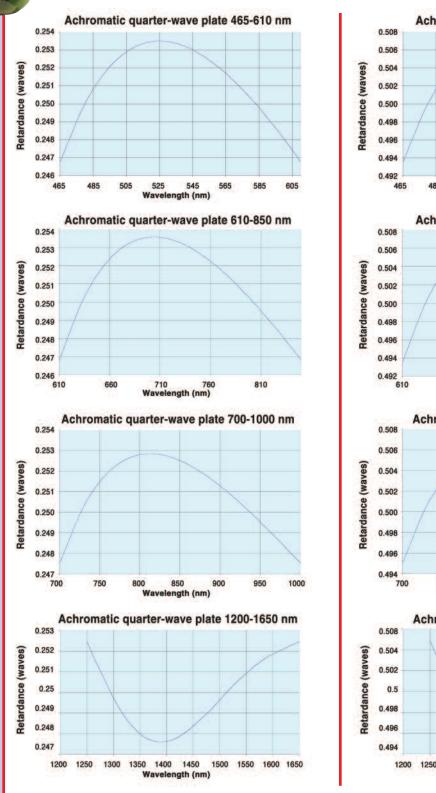

Cage Code: 1N2U3

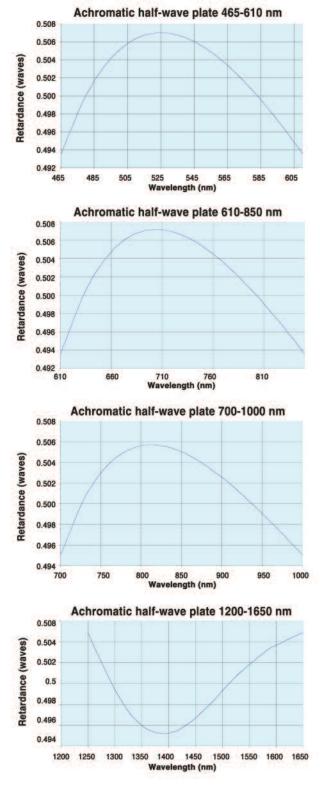



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com











Waveplate Ordering Information



The following is an explanation of the part numbering system used for Tower Optical Waveplates. Your familiarity will make it extremely easy to order any combination of parameters required.

Waveplate Part Numbers Unmounted Type Mounting Ring Construction Retardation Wavelength (Order) Diameter Diameter Z-Zero 10 mm A-Air Gap .500 A-12.7 mm M-Multi 12.7 mm **B-Cemented** .250 B-25.4 mm **High Laser** C-Contacted T-True Zero 17.5 mm Other C-30 mm Damage (-H) **D-Dual Wave** 25.4 mm D- Single Plate D-38.1 mm 38.1 mm A-Achromatic E-50.8 mm

Example: Z-17.5-A-.250-B-1064

Example HLD: Z-17.5-A-.250-B-1064-H

For achromatic WP's select wavelengths as follows: 1 = 465-610 nm 2 = 700-1000 nm3 = 1200-1650 nm 4 = 610-850 nm

237	248	266	280	308	325	355
369	377	399	400	408	413	423
442	455	458	488	514.5	527	532
556	589	632.8	647	650	660	670
676	694	710	752	755	767	780
790	795	800	808	810	825	830
850	880	905	940	980	1030	1047
1053	1064	1112	1156	1228	1310	1319
1476	1550	1570	1762	1980	1988	2020

Part Number Creation

The part number matrix is shown above. A part number is created by selecting the variables as shown above in the top line of parameter boxes starting with the type of waveplate. For a zero order waveplate select Z from the pull-down choices. The assembly of a part number is shown in the example in the middle of the matrix. This is followed by selecting the next variable which is the diameter of the unmounted waveplate, which in the

43 mm

50.8 mm

76.2mm

101.6mm

example is 17.5 mm. The construction of the waveplate is next and in this case is A for air gap. The next parameter is the retardation which is .250 representing 1/4 wave. The mounting option is next and if no mounting is required you would select N but in the case of the example a 25.4 mm mounting ring is selected. It should be mentioned here that some ring sizes are not available. In the example, an A ring would not work and you would not use any ring larger than a B.

F-63.5 mm

G-76.2 mm

H-101.6

J-114.3

N-None





561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

ISO 9001: 2015 Certified

Cage Code: 1N2U3





Precision Optical Flats



Precision optical flats are fused silica optical components that are used as a reference against which the flatness of an unknown surface can be determined. For less demanding jobs Tower ofers them made from BK7 with a flatness specified as $\lambda/4$ or better. These optical flats may also be used as windows.

Single Sided and Double Sided Optical Flats

- Fused silica
- Flatness of $\lambda/10$ or $\lambda/20$
- Single and double sided
- Easy to use
- From 25 mm to 200 mm
- Precision ground and polished
- BK7 available at lower cost

Specifications

for single and dual surface optical flats

Material: BK7 fused silica Exp. coefficient: 7.1×10^{-6} °C 0.55×10^{-6} °C 0.55×10^{-6} °C

Surface quality:60/40Parallelism:<1 arc minuteBack surface (single): $1-2 \lambda @633$ nmDiameter tolerance: ± 1 mmThickness tolerance: ± 1.5 mm


Custom versions also available

Diameter	Thickness	Material	Single or	Lambda/10		Lambd	a/20
(mm)	(mm)		Dual Surface	Catalog No.		Catalog No.	
25	12.5	Fused Silica	Single	4542-0002		4542-0022	
25	12.5	Fused Silica	Dual	4542-0004			
50	15	Fused Silica	Single	4542-0006		4542-0024	
50	15	Fused Silica	Dual	4542-0008			
100	20	Fused Silica	Single	4542-0010		4542-0026	
100	20	Fused Silica	Dual	4542-0012			
150	25	Fused Silica	Single	4542-0014			
150	25	Fused Silica	Dual	4542-0016			
200	38	Fused Silica	Single	4542-0018			
200	38	Fused Silica	Dual	4542-0020			
				Lambda/4	or better		
25	12.5	BK7	Single	4542-0001			
25	12.5	BK7	Dual	4542-0003			
50	15	BK7	Single	4542-0005			
50	15	BK7	Dual	4542-0007			
100	20	BK7	Single	4542-0009			
100	20	BK7	Dual	4542-0011			
150	25	BK7	Single	4542-0013			
150	25	BK7	Dual	4542-0015			
200	38	BK7	Single	4542-0017			
200	38	BK7	Dual	4542-0019			









Cage Code: 1N2U3 ITAR Compliant





Transmission Flats 4" and 6"



Model TX Flat 4" and 6"

- Fused silica
- Surface accuracy λ/20
- Wedge of 15 arc minutes
- Clear aperture: 4" TX Flat = 100 mm 6" TX Flat = 153 mm
- Compatible with bayonet-style mount
- Custom storage case included
- Low cost

The surface flatness of plano elements such as mirrors, prisms and windows can be verified by the use of an interferometer in conjunction with a transmission flat.

Transmission flats are used when measuring the surface flatness or transmitted wavefront of flat surfaces or optics. The Tower 4" TX Flat provides a clear aperture of 100mm, while the Tower 6" TX Flat provides a clear aperture of 153mm. The TX Flat is an assembly of a precision optical window mounted in an anodized aluminum ring that provides mounting compatibility with most bayonetstyle housings. The transmission flat assembly is supplied in an aluminum shipping/storage case.

The TX Flat is supplied with one surface AR coated with R≤ 0.25% @ 633 nm. The uncoated side has a reflectivity of about 4%. It is accompanied by a documented interferogram and Certificate of Compliance.

Ordering Information

4" TX Flat 6" TX Flat

Cage Code: 1N2U3

Catalog number: 0535-0005 0535-0011

Specifications

Window

Diameter:

Thickness:

Material: fused silica

Front Surface (Reference Surface): $\lambda/20$

4"TX Flat 6" TX Flat 114.2 mm 161.5 mm 19.0 mm 28.2 mm

Surface quality: 20/10, both sides

Wedge: 15±1 arc minutes **Protective bevel:** 1.0 mm x 45°

Anti reflective coating: one side, R≤0.25%

@ 633 nm

Housing

Material: aluminum, 6061-T6

4"TX Flat 6" TX Flat Diameter: 127.0 mm 181.1 mm Height: 36.8 mm 28.1 mm

Finish: black anodize

Case

Material: wood and foam insert

Size: **4" TX Flat** ~170 x 170 x 50 mm **6" TX Flat** ~220 x 220 x 70 mm



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com









Beam Expander, 4" to 6"



Beam Expander, 4" to 6"

- Precision Optics
- Quality Mechanics
- User Friendly
- Simple Setup
- Low cost

Tower's new BeamEx1000 provides a low cost solution to expanding the capability of a standard 4" Fizeau Interferometer to measure up to 6" optics. The BeamEx 1000 mounts to the front of a standard interferometer using the industry standard bayonet mount.

The combination of the BeamEx1000 and the interferometer provides for testing of very precise optical surfaces.

The BeamEx1000 also provides an adjustable tip and tilt capability incorporated with a 6" bayonet mounting to accommodate a suitable transmission flat, a reference flat or a transmission sphere.

Tower offers a 6" Transmission Flat which snaps into the Beam Ex 1000.

The 6" flat has a surface error of $\lambda/20$ and is AR coated for 632.8nm.

Specifications

Mechanical Interfaces

Input: 4" industry standard bayonet mount Output: 6" industry standard bayonet mount Adjustment: 2 Axis Tip and Tilt of optional 6"

Transmission Flat optic

Input Wavelength: 632.8nm

AR Coating for internal optics: R<0.25%@633nm,

per surface

Wavefront Deformation: Single pass @ 23° C, $< \lambda/3$

Input Diameter: 104mmOutput Diameter: 155mmOverall Length: 210mmOverall Width: 204mmOverall Height: 204mm

Weight: 11.7 Lbs no Tx Flat

15.4 Lbs with Tx Flat



BeamEx 1000 with 6" Transmission Flat installed.

Cage Code: 1N2U3

Ordering Information

Catalog No.

BeamEx1000 0535-0018 Tranmission Flat 6" 0535-0011



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com











Micro Prisms - Coated and Uncoated



- Nine standard sizes available: 0.5, 0.7, 1.0, 1.5, 2.0, 2.5, 3.0, 4.0 and 5.0 mm
- 45° 90° 45°
- Uncoated or enhanced aluminum on hypotenuse
- Use for concept testing or production
- Low cost

Specifications

Material: NBK-7 or H-K9L

Sizes: nine as follows: 0.5 mm, 0.7 mm, 1.0 mm, 1.5 mm, 2.0 mm, 2.5 mm, 3.0 mm, 4.0 mm and 5.0 mm

Dimensional tolerance:

For 0.5 and 0.7 mm: ± 0.05 mm **For balance:** =+0.0, -0.2 mm **Angular tolerance:** ± 3 arc minutes Surface quality: 40-20 Scratch-Dig

Corner chips: none allowed


Coating: MPCH Series = enhanced aluminum,


MPU Series = none

Clear aperture: >80% **Flatness:** $\lambda/2 @ 632.8 \text{ nm}$ Bevel: allowed up to 0.1 mm Tower has expanded its line of precision optics to include standard micro prisms, coated and uncoated, for use with laser sources and imaging applications. The micro prisms are right angle, 45°-90°-45° prisms, whose sizes range from 0.5 mm to 5.0 mm with a format of A=B=C.

These right angle prisms are used to deflect a light beam 90° or 180° as shown to the left. Depending on prism orientation, images will be inverted, but correct left to right. If the prism is rotated 90°, images viewed through it will be erect, but reversed left to right.

Coated prisms can also be used as mirror reflectors with respect to incoming light. Uncoated prisms act as mirrors for light incident on one of the short sides since incident light is totally internally reflected at the hypotenuse.



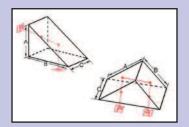

Pricing and Ordering Information

Micro Prism		Uncoated		Coated	
Size A=B=C	Catalog #	Model	Catalog#	Model	
0.5 mm	4531-0001	MPU-0.5	4531-0020	MPCH-0.5	
0.7 mm	4531-0002	MPU-0.7	4531-0021	MPCH-0.7	
1.0 mm	4531-0003	MPU-1.0	4531-0022	MPCH-1.0	
1.5 mm	4531-0004	MPU-1.5	4531-0023	MPCH-1.5	
2.0 mm	4531-0005	MPU-2.0	4531-0024	MPCH-2.0	
2.5 mm	4531-0006	MPU-2.5	4531-0025	MPCH-2.5	
3.0 mm	4531-0007	MPU-3.0	4531-0026	MPCH-3.0	
4.0 mm	4531-0008	MPU-4.0	4531-0028	MPCH-4.0	
4.0 mm	4531-0009	MPU-5.0	4531-0029	MPCH-5.0	

Contact factory for quantity pricing or special coatings sales@toweroptical.com



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

















50, 25, 20, 15 and 12.5 mm Prisms

Tower Optical offers large format, high quality, right angle prisms for experimentation, research and education. These prisms are stock products for immediate shipment. Prisms are available in BK7 or fused silica type glass.

Series LPU – Large Prisms Uncoated

- 12.5 mm to 50 mm
- BK7 or UV fused silica
- High quality
- Uncoated
- Coated on special order
- Custom variations

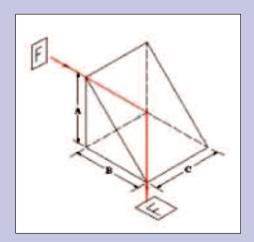

Specifications

Material: BK7 (or equiv) or UV fused silica

Dimensional tolerance: ±0.1 mm

Flatness: $\lambda/4 @ 632.8 \text{ nm}$

Surface quality: 40-20 Scratch-Dig **Angle tolerance:** ±30 arc seconds

Pyramid error: Less than 10 arc minutes

Cage Code: 1N2U3

Bevel: 0.2-0.5 mm x 45° **Coating:** Not coated

Pricing and Ordering Information

Catalog Number	Model No.	Glass	Size mm A=B=C	
4531-0010	LPU-112	BK7	12.5	
4531-0011	LPU-115	BK7	15.0	
4531-0012	LPU-120	BK7	20.0	
4531-0013	LPU-125	BK7	25.0	
4531-0014	LPU-150	BK7	50.0	
4531-0015	LPU-212	FS	12.5	
4531-0016	LPU-215	FS	15.0	
4531-0017	LPU-220	FS	20.0	
4531-0018	LPU-225	FS	25.0	
4531-0019	LPU-250	FS	50.0	

For sizes larger than 50 mm or variations in the dimensions, or coatings on the prism surfaces contact Sales@TowerOptical.com




561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com









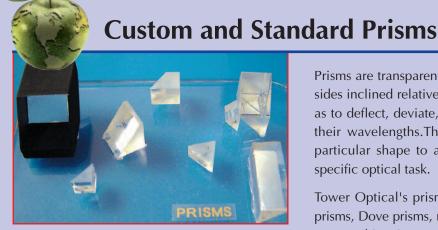



Prisms are transparent optical blocks having at least two flat polished sides inclined relative to each other, at precisely controlled angles, so as to deflect, deviate, and rotate beams of light as well as dispersing their wavelengths. There are many types of prisms, each having a particular shape to achieve the necessary reflections to perform a specific optical task.

Tower Optical's prism capability includes penta prisms, right angle prisms, Dove prisms, roof prisms, Amici prisms, corner cube reflectors, anamorphic prisms, wedge prisms and polarizers including Glan-Taylor prisms, Wollaston prisms and Rochon prisms.

For right angle prisms, Tower Optical offers three different quality standards: Standard Grade, High Grade and Laser Grade.

The basic specifications are shown below.

Specification	Standard Grade	High Grade	Laser Grade
Material	BK7 grade A glass	BK7 grade A glass	BK7 grade A glass
Dimensional tolerance	±0.2 mm	±0.1 mm	±0.1 mm
Flatness	λ/2 @ 632.8 nm	λ/4 @ 632.8 nm	λ/10 @ 632.8 nm
Surface quality	60-40 Scratch-Dig	40-20 Scratch-Dig	20-10 Scratch-Dig
Angle tolerance	±3 arc minutes	±30 arc seconds	±30 arc seconds
Pyramid Error	< 10 arc minutes	< 10 arc minutes	< 5 arc minutes
Bevel	0.2-0.5 mm x 45°	0.2-0.5 mm x 45°	0.25 mm x 45°

These prisms are also available in UV grade Fused Silica as well as other material. Optical coatings are also available for AR, mirror or beamsplitter applications.

Tower Optical manufactures custom prisms.

If you have a design simply email it to Sales@TowerOptical.com and indicate the quantity required.

We will respond with a quotation

ASAP!

Custom Prism Capabilities


Sizes 0.5 - 100 mm
Angle tolerance to 1 arc second
Dimensional tolerance +0.10 mm
Surface quality (Scratch/ Dig) 10/5

Flatness $\lambda/10 @ 632.8$ nm









Cage Code: 1N2U3 ITAR Compliant





Beamsplitters



Beamsplitters are used to split or combine beams of light. Tower Optical provides some standard beamsplitters, but most are custom per drawings submitted by a customer. Some standard cubes and plate beamsplitters are shown below.

Plates are used for most laser applications as they exhibit low absorption. Cubes are a convenient, protected form for low power applications. The performance of the beamsplitters is a function of the beamsplitter coating.

Polarization Beamsplitter Cubes

These beamsplitters are based upon using two complementary prisms. The output beam that is parallel to the input beam is p-polarized, while the orthogonal output beam is s-polarized. Non-polarized beamsplitter cubes can be provided.



Beamsplitter Plates

Beamsplitter plates are primarily used to split or recombine a beam of light, especially in high power lasers. When using beamsplitter plates the two



partial beams travel different optical paths. The optical paths depend on the incident angle and the thickness of the plates. The beam can be shifted.

Specifications

Material: BK-7 grade A optical glass Dimension range: 3.2 mm to 50.8 mm **Dimensional tolerance:** ± 0.2 mm **Angular tolerance:** ± 3 arc minutes Surface quality: 60-40 Scratch-Dig Beam deviation: 3 arc minutes

Extinction ratio: >100:1

Principal transmittance: $T_D>95\%$ and $T_S<1\%$ **Principal reflectance:** R_S>99% and R_D<5% Wavelength range: 226 nm to 2300 nm

Polarization beamsplitter coating: on hypotenuse

AR coating: R<0.25% per face for 4 faces

Specifications

Material: BK-7 grade A optical glass Diameter range: 10 mm to 50.8 mm **Dimensional tolerance:** ± 0.2 mm **Thickness tolerance:** ± 0.2 mm **Flatness:** $\lambda/4@632.8$ nm per 25 mm Surface quality: 60-40 Scratch-Dig

Parallelism: 1 arc minute

T/R: 50/50 ± 5% for random polarization

 $T=(T_S + T_D), R=(R_S + R_D)/2$ *Coatings:* 45° incidence

S1: Single wavelength partial reflectance

\$2: "V" AR-coatings

Pricing and Ordering Information

Model	Narrow or Broad	Size mm	
BSPN1-5-X	Ν	5 x 5 x 5	
BSPN1-10-X	Z	10 x 10 x 10	
BSPN1-15-X	Z	15 x 15 x 15	
BSPN1-20-X	Z	20 x 20 x 20	
BSPB1-10-Y	В	10 x 10 x 10	
BSPB1-15-Y	В	15 x 15 x 15	
BSPB1-20-Y	В	20 x 20 x 20	

Model	Narrow or Broad	Size mm	Shape RND SQ	
BSNN1-12.7S-X	N	12.7 x 12.7 x 3	SQ	
BSNN1-25.4S-X	N	25.4 x 25.4 x 3	SQ	
BSNN1-25.4R-X	N	25.4 x 3	RND	
BSNN1-50.8S-X	N	50.8 x 50.8 x 3	SQ	
BSNB1-12.7S-Y	В	12.7 x 12.7 x 3	SQ	
BSNB1-25.4S-Y	В	25.4 x 25.4 x 3	SQ	
BSNB1-25.4R-Y	В	25.4 x 3	RND	
BSNB1-50.8S-Y	В	50.8 x 50.8 x 3	SQ	

ITAR Compliant

X = Narrow band wavelengths: 488, 514, 633, 780, 850, 1064, 1300, 1550 nm

Y = Broad band ranges (nm): 1 = 450 - 680, 2 = 650 - 850, 3 = 900 - 1200, 4 = 1200 - 1550 nm

The Beamsplitter specifications are general - We are happy to quote other specifications.








561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3







Long Pass Filter

100.0



Custom Filters

Tower custom filters cover applications for biomedical bandpass, narrow bandpass, broad banpass or long pass. Using ion-beam sputtering together with volume manufacturing methods, Tower is able to offer cost-effective solutions.

Coatings

- **Highpower laser coatings:** anti-reflection, reflective, partial reflectors, beamsplitters and polarizers
- **Metallic coatings**

Aluminum - UV and protected Silver - protected Reflectance >98% 800 nm to IR Gold - protected and unprotected

- **Broadband dichroic beamsplitter coatings**
- **Polarizing beamsplitter coatings**
- Multi-wavelength and extended coatings
- Anti-reflective coatings from UV to IR
- Dielectric high reflective coatings high power
- Filters short pass, long pass and bandpass filters

The above coatings are available for wavelengths ranging from UV, VIS, and near IR, including laser wavelengths from 193 nm to 3 microns. Custom and specialized coatings available upon request.

IBS Ion beam sputttered thin films for the most complex optical image. We can provide computer design of optical systems and thin film coatings. Tower offers Laser damage and envioromental testing per customer request.

Biomedical Filters

From: 340 nm to 766 nm Size: as required **CWL tolerance:** ±2 nm FWHM: 8-10 nm, typical FWHM tolerance: ±1 nm *Transmission:* >50% **Blocking:** 300 nm – 1200 nm

Rejection: OD=4, 0.01% or 10⁻⁴

Narrow Bandpass

From: 340 nm to 1570 nm

Size: as required

CWL tolerance: 0.4 nm – 2 nm **FWHM:** 2 nm – 50 nm

Transmission: >90%

Blocking: 300 nm – 1200 nm 300 nm – 1800 nm

Rejection: OD>4, OD>6


Broad Bandpass

From: 340 nm to 1570 nm Size: as required CWL tolerance: >10 nm **FWHM:** >50 nm *Transmission:* >70%*

Blocking: 300 nm – 1200 nm

300 nm – 1800 nm Rejection: OD>3, OD>4

* Specify desired level

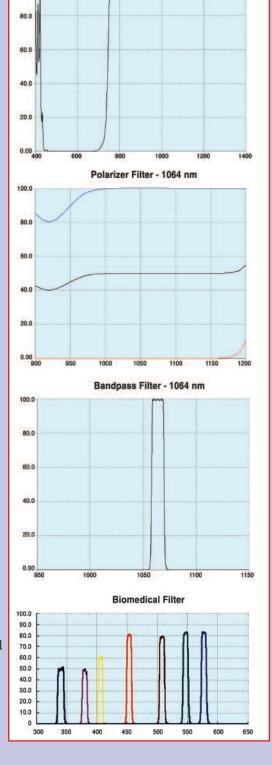



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com







Hot and Cold Mirrors



Hot Mirrors are used in applications when there is the requirement to separate visible light from heat. The hot mirror accomplishes this by reflecting the heat. The use of borosilicate type glass allows operation in high temperatures. Operation at an AOI of 0° is preferred. The most common wavelength range for an average transmission of 85% through the hot mirror is 420-700 nm. The reflective range for the hot mirror for R>95% is 800-1000 nm. Additionally, R>50% from 735-1080 nm.


Cold Mirrors are used where the requirements are to reflect visible light and remove the heat by transmission. Operation at an AOI of 45° is preferred. The most common wavelength range for transmission through the cold mirror is 800–1200 nm. The average-transmission range is T>85%. Additionally, R>95% for 400 - 700 nm.

Features of Hot Mirrors

- High transmission for the visible range
- High reflection for infrared
- Removes heat
- Uses Borofloat® type glass
- Dielectric coating
- AOI's of 0° or 45°
- Custom mirrors to your configuration

Features of Cold Mirrors

- High reflection for the visible range
- High transmission for infrared

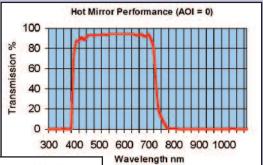

Typical Specifications

Hot Mirrors

Material: borosilicate type glass

Size: 15 mm to 300 mm Thickness: 3.3 mm

Mirror coating: dielectric multilayer *Transmission:* Tave>85% for 425–700nm *Reflection:* Rave>90% for 750–1050nm

Surface Finish: 80-50

Flatness: $\lambda/2$ @633 nm per inch **Protective Bevel:** 0.3 mm x 45°

Cold Mirrors


Material: borosilicate type glass

Size: 15 mm to 300 mm
Thickness: 3.3 mm

Mirror coating: dielectric multilayer *Transmission:* tave>85% for 750–1000 nm *Reflection:* rave>90% for 400–700 nm

Surface Finish: 80-50

Flatness: $\lambda/2$ @633 nm per inch **Protective Bevel:** 0.3 mm x 45°

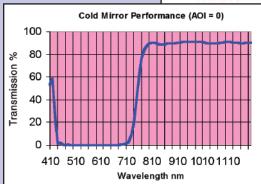

Standard Cold/Hot Mirrors


Туре	Model	AOI
	MC0-25.4	0
Cold	MC0-50.8	0
Cold	MC45-25.4	45
	MC45-50.8	45
	MH0-25.4	0
Hot	MH0-50.8	0
1100	MH45-25.4	45
	MH45-50.8	45

Custom Cold/Hot Mirrors available.










Cage Code: 1N2U3











Windows are used to isolate different physical environments while allowing light to pass. The selection of a window should consider the properties of the different optical materials, transmission, wavelength range, and resistance to the environment. Tower offers a wide range of materials and a variety of antireflecting coatings that can be deposited on the windows.

Tower Optical manufactures windows from BK7, UV grade fused silica and sapphire. Other materials are available on a custom basis. In addition, we offer three different quality standards as described below. Contact factory for info on sapphire windows.

Specifications	Standard Grade	High Grade	Laser Grade	High Grade
Material	BK7 grade A	BK7 grade A	UV fused silica	sapphire
Dimensional tolerance +0.0/-0.1 mm		+0.0/-0.1 mm	+0.0/-0.1 mm	±0.1 mm
Flatness (TWF)	λ/2 @ 632.8 nm	λ/10 @ 632.8 nm	λ/10 @ 632.8 nm	λ /4 per 25.4 mm
Surface quality	40-20 Scratch-Dig	20-10 Scratch-Dig	20-10 Scratch-Dig	40-20 Scratch-Dig
Thickness tolerance	±0.2 mm	±0.2 mm	±0.2 mm	±0.1 mm
Parallelism < 1 arc minute		< 10 arc seconds	< 10 arc seconds	<30 arc seconds
Bevel	0.2 mm x 45°	0.2 mm x 45°	0.2 mm x 45°	

BK7 grade A optical glass, Standard WB11 and High WB12					UV gra	de fused sil	ica, High	WB22			
Model No.	Dia mm	Thick		Model No.	Dia mm	Thick		Model No.	Dia mm	Thick	
WB11-005	5.0	2.0		WB12-005	5.0	2.0		WF22-005	5.0	2.0	
WB11-010	10.0	2.0		WB12-010	10.0	2.0		WF22-010	10.0	2.0	
WB11-012	12.5	2.0		WB12-012	12.5	6.0		WF22-012	12.5	6.0	
WB11-020	20.0	2.0		WB12-020	20.0	6.0		WF22-020	20.0	6.0	
WB11-025	25.0	2.0		WB12-025	25.0	6.0		WF22-025	25.0	6.0	
WB11-038	38.0	4.0		WB12-038	38.0	10.0		WF22-038	38.0	10.0	
WB11-050	50.0	4.0		WB12-050	50.0	10.0		WF22-050	50.0	10.0	

Mirrors have one surface with a highly reflective coating, usually aluminum or silver. Most mirrors for optical applications are called first surface types since the coating is on the front surface thereby eliminating the optical properties of the glass from affecting the incident or reflected light. The rear surface is usually fine ground. All of the following mirrors have a protected aluminum coating applied to the front surface.

Specifications	Standard grade	High grade
Material	BK7 grade A	BK7 grade A
	Ditt grade /1	or fused silica
Dimensional tolerance	+0.0/-0.1 mm	+0.0/-0.1 mm
Flatness:	λ/5 @ 632.8 nm	λ/10 @ 632.8 nm
Surface quality	40-20 Scratch-Dig	10-5 Scratch-Dig
Thickness tolerance	±0.2 mm	±0.2 mm
Parallelism	< 3 arc minutes	< 3 arc minutes

BK7 grade A optical glass, Standard MB11 and High MB12						UV grad	e fused sili	ca, High	MF22		
Model No.	Dia mm	Thick		Model No.	Dia mm	Thick		Model No.	Dia mm	Thick	
MB11-010	10.0	2.0		MB12-010	10.0	2.0		MF22-010	10.0	2.0	
MB11-012	12.5	2.0		MB12-012	12.5	6.0		MF22-012	12.5	6.0	
MB11-020	20.0	2.0		MB12-020	20.0	6.0		MF22-020	20.0	6.0	
MB11-025	25.0	2.0		MB12-025	25.0	6.0		MF22-025	25.0	6.0	
MB11-038	38.0	4.0		MB12-038	38.0	10.0		MF22-038	38.0	10.0	
MB11-050	50.0	4.0		MB12-050	50.0	10.0		MF22-050	50.0	10.0	



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com











Lenses – Custom and Cylindrical



Custom Lenses

- Lenses and micro lenses
- Custom made to your specifications
- Singlets, doublets, triplets
- Multi-element assemblies
- Precision tolerances available
- Free consultation

General Lens Capabilities

Sizes: 1 mm to 350 mm

Diameter tolerance: ±0.02 mm

Decentration (wedge): ±10 second


Irregularity: 0.05 waves @ 632.8

Spherical error: 0.10 waves @ 632.8

Surface quality: 10-5 Scratch-Dig

Thickness tolerance: ± 0.01 mm

Send us your drawing

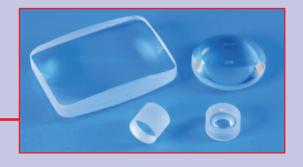

Cylindrical Lenses

Plano Convex Cylindrical Lenses

Model	H x L mm	EFL mm	BFL mm	R1 mm	Tc mm	Te mm
CYX15-010-012	10 x 10	12.7	9.862	6.56	4.31	2.0
CYX15-010-020	10 x 10	20	17.835	10.33	3.29	2.0
CYX15-010-025	10 x 10	25	23.016	12.92	3.01	2.0
CYX15-020-012	10 x 20	12.7	9.862	6.56	4.31	2.0
CYX15-020-020	10 x 20	20	17.835	10.33	3.29	2.0
CYX15-020-025	10 x 20	25	23.016	12.92	3.01	2.0
CYX15-040-050	20 x 40	50	47.352	25.82	4.02	2.0
CYX15-040-075	20 x 40	75	72.822	38.73	3.31	2.0
CYX15-040-100	20 x 40	100	97.381	51.64	3.98	3.0
CYX15-040-150	20 x 40	150	147.6	77.46	3.65	3.0

Plano Concave Cylindrical Lenses

Model	H x L mm	EFL mm	BFL mm	R1 mm	Tc mm	Te mm
CYV16-010-012	10 x 10	-12.7	-14.023	-6.56	2.0	4.31
CYV16-010-025	10 x 10	-25.0	-26.320	-12.91	2.0	3.01
CYV16-020-012	10 x 20	-12.7	-14.030	-6.56	2.0	4.31
CYV16-020-025	10 x 20	-25.0	-26.320	-12.91	2.0	3.01
CYV16-040-050	20 x 40	-50.0	-51.981	-25.82	2.0	4.02
CYV16-040-075	20 x 40	-75.0	-76.983	-38.73	3.0	4.31
CYV16-040-100	20 x 40	-100.0	-101.325	-51.64	3.0	3.98
CYV16-040-150	20 x 40	-150.0	-151.987	-77.46	3.0	3.65
CYV16-040-250	20 x 40	-250.0	-251.974	-129.09	3.0	3.39
CYV16-040-500	20 x 40	-500.0	-501.969	-258.18	3.0	3.19

Cage Code: 1N2U3


Specifications

Material: BK7 or equivalent
Design wavelength: 587.6nm
Dimensional tolerance: ±0.2 mm
Focal length tolerance: ±2%
Centering tolerance: 5-15 arc minutes

Clear aperture: 90%

Surface quality: 60-40 Scratch-Dig

Bevel: 0.2 mm x 45° **Coating:** none

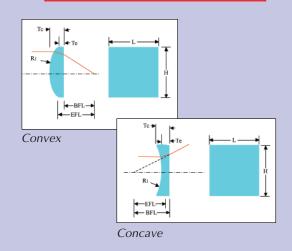



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com







Ball and Drum Lenses



Ball Lenses are used for various tasks such as improving the coupling between optical fibers and the emitters or detectors they interface with. Standard size lenses range from 1.0 mm to 5.0 mm. Custom-made sizes or special materials are also available. All ball lenses can be ordered with full-surface anti-reflection (AR) coating.

The effective focal length of a ball lens is given by the following formula:


BFL = F - D/2 and EFL = nD/4(n-1)

The Numerical Aperture (NA) of a ball lens is dependent on the focal length of the ball and on the input diameter, d.

NA = 2d(n-1)/nD

Pricing and ordering info

Ball Lens Diameter	Material	Model Number
1.0 mm	BK7	LB1-001
2.0 mm	BK7	LB1-002
3.0 mm	BK7	LB1-003
4.0 mm	BK7	LB1-004
5.0 mm	BK7	LB1-005
1.0 mm	UV FS	LB2-001
2.0 mm	UV FS	LB2-002
3.0 mm	UV FS	LB2-003
4.0 mm	UV FS	LB2-004
5.0 mm	UV FS	LB2-005
6.0 mm	UV FS	LB2-006
8.0 mm	UV FS	LB2-008
10.0 mm	UV FS	LB2-010

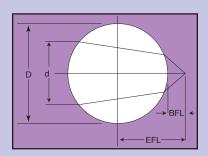

Specifications

Material: BK7 grade A or equivalent or


UV fused silica

Diameter tolerance: ±0.01 mm

Sphericity: ±0.003 mm

Surface quality: 40-20 Scratch-Dig

Coating: none

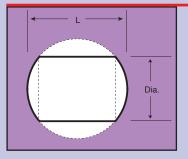

Drum Lenses

A drum lens is a variation of a ball lens where a portion of the ball is ground down to a smaller diameter. These lenses are used in similar applications to those of ball lenses. The drum lens adds the ability to handle and package it in a different way.

Specifications

Material: BK7 grade A optical glass *Diameter tolerance:* +0.0/-0.05 mm

Length: ±0.01 mm

Surface quality: 40-20 Scratch-Dig

Coating: none

Models available. Call for prices

Model No.	Diameter	Length
LD1-020-025	2.0 mm	2.5 mm
LD1-020-030	2.0 mm	3.0 mm
LD1-020-040	3.0 mm	4.0 mm
LD1-020-050	4.0 mm	5.0 mm

LD2-XXX-yyy is Fused Silica drum lenses. Contact factory for pricing.



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3 ITAR Compliant









Tower Optical's plano concave lenses have a negative focal length, diverge collimated incident light, and form only virtual images which are seen through the lens. They are often used to expand light beams or increase focal lengths in existing systems.

They are widely used in telescopes, collimaters, optical transceivers, magnifiers, radiometers and condensers.

Specifications


Material: BK7, grade A, fine anneal, or K9 substitute

Design wavelength: 632.8 nm
Diameter tolerance: +0/-0.10 mm
Focal length tolerance: ±1%
Centering: ±3 arc minutes

Clear aperture: 90% of diameter *Surface quality:* 60-40 Scratch-Dig

Bevel: 0.25 mm x 45°

Coating: none

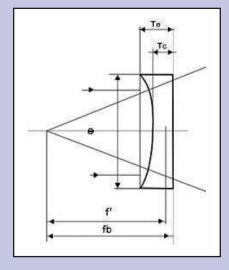

Part No. Number	Dia. (mm)	EFL (mm)	R1 (mm)	R2 (mm)	CT (mm)	ET (mm)	BFL (mm)
LNCV001	6	-18	-9.26	∞	2	2.5	-19.32
LNCV002	6	-24	-12.35	∞	2	2.37	-25.32
LNCV003	12.7	-25	-12.87	∞	3	4.68	-26.98
LNCV004	12.7	-30	-15.44	∞	3	4.37	-31.98
LNCV005	12.7	-50	-25.73	∞	3.5	4.3	-52.31
LNCV006	25.4	-50	-25.7	∞	3.5	6.9	-52.3
LNCV007	25.4	-75	-38.6	∞	3.5	5.65	-77.31
LNCV008	25.4	-100	-51.46	∞	4	5.59	-102.64
LNCV009	50.8	-75	-38.6	∞	3.5	13.04	-77.31
LNCV010	50.8	-100	-51.46	∞	4	10.71	-102.64
LNCV011	50.8	-150	-77.19	∞	4	8.3	-31.97

Please check with Tower for availability.

Call us for quantity pricing.







561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3











Tower Optical's plano convex lenses have positive focal lengths, converge incident light, and form both real images (as might be focused in a piece of paper), and virtual images (as are seen through the lenses when they are used as magnifiers.)

They are widely used in telescopes, collimators, optical transceivers, magnifiers, radiometers and condensers.

Plano Convex Lenses

Part No. Number	Diameter (mm)	EFL (mm)	R1 (mm)	CT (mm)	ET (mm)	BFL (mm)
LNCX001	6	10	5.15	2.46	1.5	8.37
LNCX002	6	12	6.18	2.28	1.5	10.5
LNCX003	6	15	7.73	2.11	1.5	13.61
LNCX004	6	30	15.54	1.79	1.5	28.82
LNCX005	12.7	15	7.73	5.12	1.8	11.62
LNCX006	12.7	20	10.3	3.99	1.8	17.37
LNCX007	12.7	25	12.88	3.47	1.8	22.71
LNCX008	12.7	30	15.45	3.17	1.8	27.91
LNCX009	12.7	40	20.6	2.8	1.8	38.15
LNCX010	12.7	50	25.75	2.6	1.8	48.29
LNCX011	12.7	100	51.51	2.19	1.8	98.55
LNCX012	25.4	25.4	13.08	11.74	1.8	17.65
LNCX013	25.4	30	15.45	8.65	2	24.29
LNCX014	25.4	35	18.03	7.23	2	30.23
LNCX015	25.4	40	20.6	6.38	2	25.79
LNCX016	25.4	50	25.75	5.35	2	46.47
LNCX017	25.4	60	30.9	4.73	2	56.88
LNCX018	25.4	75	38.63	4.15	2	72.26
LNCX019	25.4	100	51.51	3.59	2	97.63
LNCX020	25.4	125	64.39	3.26	2	122.85
LNCX021	25.4	150	77.26	3.05	2	147.99
LNCX022	25.4	175	90.14	2.9	2	173.09
LNCX023	25.4	200	103.02	2.79	2	198.16
LNCX024	25.4	250	128.77	2.63	2	248.27

(continued on next page)

Please check with Tower for availability.

Cage Code: 1N2U3

Contact us for quantity pricing. sales@toweroptical.com



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com












Plano Convex Lenses



Plano Convex Lenses (continued)

Part No. Number	Diameter (mm)	EFL (mm)	R1 (mm)	CT (mm)	ET (mm)	BFL (mm)
LNCX025	25.4	300	154.52	2.52	2	298.33
LNCX026	25.4	400	206.03	2.39	2	398.42
LNCX027	25.4	500	257.54	2.31	2	498.47
LNCX028	25.4	750	386.31	2.21	2	748.54
LNCX029	25.4	1000	515.08	2.16	2	998.58
LNCX030	50.8	60	30.9	16.3	3	49.24
LNCX031	50.8	75	38.63	12.52	3	66.73
LNCX032	50.8	100	51.51	9.7	3	93.6
LNCX033	50.8	125	64.39	8.22	3	119.57
LNCX034	50.8	150	77.26	7.29	3	145.19
LNCX035	50.8	175	90.14	6.65	3	170.61
LNCX036	50.8	200	103.02	6.18	3	195.92
LNCX037	50.8	250	128.77	5.53	3	246.35
LNCX038	50.8	300	154.52	5.1	3	296.63
LNCX039	50.8	400	206.03	4.57	3	396.98
LNCX040	50.8	500	257.54	4.26	3	497.19
LNCX041	50.8	750	386.31	3.84	3	747.47
LNCX042	50.8	1000	515.08	3.63	3	997.61
LNCX043	75	85	43.78	24.19	3	69.04
LNCX044	75	100	51.51	19.2	3	87.33
LNCX045	75	150	77.26	12.71	3	141.61
LNCX046	75	200	103.02	10.07	3	193.35

Please check with Tower for availability.

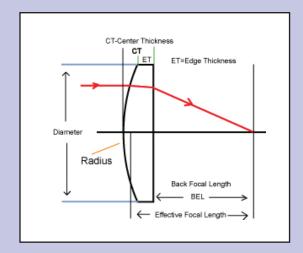

Specifications

Material: BK7, grade A, fine anneal, or K9

Design wavelength: 632.8 nm
Diameter tolerance: +0/-0.10 mm
Focal Length tolerance: ±1%
Centering: ±3 arc minutes

Clear aperture: 90% of diameter *Surface quality:* 60-40 Scratch-Dig

Bevel: 0.25 mm x 45°

Coating: none

Contact us for quantity pricing. sales@toweroptical.com







561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3








Bi Convex Lenses



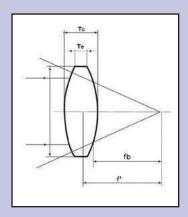

Specifications

Material: BK7, grade A, fine anneal, or K9 substitute

Design wavelength: 632.8 nm **Diameter tolerance:** +0/-0.10 mm

Focal Length tolerance: ±1%

Centering: ±3 arc minutes

Clear aperture: 90% of diameter

Surface quality: 60-40 Scratch-Dig

Bevel: 0.25 mm x 45°

Coating: none

		l			l a=			
Part No.	Dia.	EFL	R1	R2	CT	ET	BFL	
Number	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)	
LNBX001	6	10	9.87	9.87	2.43	1.5	9.16	
LNBX002	6	12	11.97	11.97	2.76	1.5	11.73	
LNBX003	6	15	15.09	15.09	2.1	1.5	14.29	
LNBX004	6	30	30.6	30.6	1.79	1.5	29.4	
LNBX005	9	12	11.72	11.72	3.6	1.8	10.75	
LNBX006	9	20	20.11	20.11	2.82	1.8	19.05	
LNBX007	12.7	15	14.61	14.61	4.7	1.8	13.36	
LNBX008	12.7	20	19.92	19.92	3.88	1.8	18.68	
LNBX009	12.7	25	25.16	25.16	3.43	1.8	23.84	
LNBX010	12.7	30	30.36	30.36	3.14	1.8	28.95	
LNBX011	12.7	40	40.72	40.72	2.8	1.8	39.07	
LNBX012	12.7	50	51.06	51.06	2.59	1.8	49.14	
LNBX013	12.7	100	102.64	102.64	2.19	1.8	99.27	
LNBX014	25.4	25.4	24.54	24.54	8.98	1.8	22.24	
LNBX015	25.4	30	29.53	29.53	7.74	2	27.33	
LNBX016	25.4	35	34.86	34.86	6.79	2	37.68	
LNBX017	25.4	40	40.14	40.14	6.12	2	37.93	
LNBX018	25.4	50	50.6	50.6	5.24	2	48.24	
LNBX019	25.4	60	61.01	61.01	4.67	2	58.44	
LNBX020	25.4	75	76.56	76.56	4.12	2	73.62	
LNBX021	25.4	100	102.4	102.4	3.58	2	98.81	_
LNBX022	25.4	125	128.21	128.21	3.26	2	123.92	
LNBX023	25.4	150	154	154	3.05	2	148.99	
LNBX024	25.4	175	179.78	179.78	2.9	2	174.04	
LNBX025	25.4	200	205.56	205.56	2.79	2	199.06	
LNBX026	25.4	250	257.09	257.09	2.63	2	249.13	
LNBX027	25.4	300	308.62	308.62	2.52	2	299.17	
LNBX028	25.4	400	411.66	411.66	2.39	2	399.21	
LNBX029	25.4	500	514.69	514.69	2.31	2	499.34	
LNBX030	25.4	750	772.25	772.25	2.21	2	749.27	
LNBX031	25.4	1000	1029.8	1029.8	2.16	2	999.29	
LNBX032	50.8	60	59.25	59.25	14.44	3	55.03	
LNBX033	50.8	75	75.19	75.19	11.84	3	70.99	
LNBX034	50.8	100	101.38	101.38	9.47	3	96.82	
LNBX035	50.8	125	127.38	127.38	8.12	3	122.29	
LNBX036	50.8	150	153.28	153.28	7.24	3	147.59	
LNBX037	50.8	175	139.15	139.15	6.62	3	172.8	
LNBX038	50.8	200	204.98	204.98	6.16	3	197.96	
LNBX039	50.8	250	256.6	256.6	5.52	3	248.17	
LNBX040	50.8	300	308.16	308.16	5.1	3	298.31	
LNBX040	50.8	400	411.29	411.29	4.57	3	398.49	
LNBX041 LNBX042		500				3	498.59	
	50.8		514.36	514.36	4.26	3	748.73	
LNBX043	50.8	750	771.97	771.97	3.84			
LNBX044	50.8	1000	1029.55	1029.55	3.63	3	998.8	

Please check with Tower for availability

Call us for quantity pricing. sales@toweroptical.com



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com









Mini Lenses





Biconvex Mini Lenses


Part Number	Dia (mm)	FL (mm)	Material	Tc (mm)	Te (mm)
LMBX001	3.0	4.5	BK7	2.0	1.5
LMBX002	3.0	6.0	BK7	1.8	1.4
LMBX003	3.0	9.0	BK7	1.6	1.4
LMBX004	5.0	4.5	BK7	3.0	1.3
LMBX005	5.0	7.0	BK7	3.0	2.0
LMBX006	5.0	10.0	BK7	2.6	2.0

Plano Convex Mini Lenses


Part Number	Dia (mm)	FL (mm)	Material	Tc (mm)	Te (mm)
LMPX001	1.0	0.6	LaSFN9	0.50	0.39
LMPX002	1.5	1.0	LaSFN9	0.80	0.30
LMPX003	1.5	1.5	LaSFN9	0.80	0.56
LMPX004	1.5	29.0	BK7	0.50	0.46
LMPX005	2.0	1.5	LaSFN9	0.80	0.32
LMPX006	2.0	2.0	LaSFN9	0.80	0.48
LMPX007	2.5	1.6	LaSFN9	0.99	0.17
LMPX008	2.5	2.0	LaSFN9	0.80	0.25
LMPX009	2.5	2.5	LaSFN9	0.80	0.39
LMPX010	2.5	3.0	LaSFN9	0.80	0.48
LMPX011	3.0	3.0	SF11	2.00	1.46
LMPX012	3.0	4.5	SF6	1.80	1.47
LMPX013	3.0	6.0	BK7	1.80	1.41
LMPX014	3.0	9.0	BK7	1.50	1.25
LMPX015	3.0	12.0	BK7	1.08	0.90
LMPX016	3.0	15.0	BK7	1.26	1.12
LMPX017	4.0	4.0	SF6	1.70	1.00
LMPX018	4.0	6.0	BK7	2.26	1.53
LMPX019	4.0	8.0	BaF10	1.39	1.00
LMPX020	4.0	10.0	BK7	1.64	1.24
LMPX021	4.0	12.0	BK7	1.52	1.19
LMPX022	5.0	5.0	SF6	1.87	1.00
LMPX023	5.0	10.0	BK7	1.64	1.00
LMPX024	5.0	12.0	BK7	1.77	1.25
LMPX025	5.0	15.0	BK7	1.60	1.19

Mini Achromatic Lenses (MgF2 coated)


Part Number	Dia (mm)	FL (mm)	Tc (mm)	Te (mm)
LMD001	3.0	9.0	2.50	2.19
LMD002	3.0	12.0	2.68	2.45
LMD003	4.0	8.0	2.53	2.09
LMD004	5.0	7.5	4.75	3.98
LMD005	5.0	10.0	2.75	2.22
LMD006	5.0	15.0	2.58	2.23
LMD007	5.0	20.0	2.64	2.37

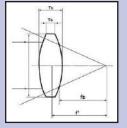

Biconvex Mini Lenses

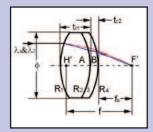

Mini Achromatic Lenses

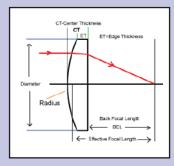

Convex Mini Lenses

Call us for quantity pricing. sales@toweroptical.com








561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3





Large Optics







These are a sampling of **Tower's** capability in fabricating large, precision optics. **Send us your drawings so we can quote them**

and build one for you.



10" custom Dove Prism



Optical Flats up to 10"




12 sided Optic Scanner Prism

Optical Assemblies



- Multi-element assemblies
- Beam combiners
- Custom prism assemblies
- Window assemblies
- Cell null lens assembly
- Mirror mounts
- IR optics for military
- Reflector assemblies
- And more!

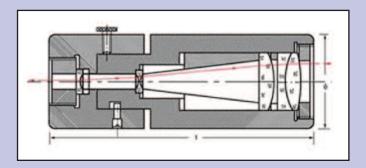

Take advantage of **Tower Optical's** knowledge and experience with precision assembly by allowing Tower Optical, and its worldwide network of optical partners, to provide you with optical assembly services for even the most challenging tasks and exacting specifications. Note, of course, that Tower can also manufacture the optical components required in your assembly thereby allowing you to achieve your end objective in fewer, more efficient, steps. Tower is dedicated to being a top-quality source for both optical components and assembly services.

Tower Optical will bring you the precision and quality you want at lower prices than our competitors!

Experienced Staff

Tower's in-house staff of optics professionals includes experienced technicians with a track record in a wide variety of assemblies. Our worldwide partner network adds to the in-house capability and allows the expansion of the force to accommodate large jobs as well as small ones.

Please submit your requirements to sales@toweroptical.com for a prompt quote.



561-740-2525 • Fax 561-740-2518 sales@TowerOptical.com • www.TowerOptical.com

Cage Code: 1N2U3 ITAR Compliant



Waveplate and Similar Optics Mounting Rings





- Mounting ring includes retainer
- All retainers use fine threads
- High grade aluminum
- Hard coat black anodize
- Six sizes
- With or without axis mark

Tower Optical optics mounts are precision machined optical assemblies consisting of a housing and a retaining ring. The interface between the housing and ring is a fine metric thread. The retaining rings all have slots to simplify insertion and securing the internal optic being held. The mounts can be used for waveplates, mirrors, windows and lenses.

The mounts shown here are standard products, in stock, for immediate shipment. Tower welcomes requests for custom mounts that you may require. Simply email your drawings with quantities to quote to sales@TowerOptical.com. We will respond promptly.




Pricing and Odering Information

Mount P/N	A Diameter	B Clear Aperture	C Optics Diameter	D Internal Clearance	E Thickness	F Axis	
0515-0002	12.7	8	10	11	6.4	No	
0515-0002-L	12.7	8	10	11	6.4	Yes	
0515-0003	25.4	8	10	18	7.8	No	
0515-0003-L	25.4	8	10	18	7.8	Yes	
0515-0001	25.4	15	17.5	18	7.8	No	
0515-0001-L	25.4	15	17.5	18	7.8	Yes	
0515-0004	30	23	25.4	25.8	6	No	
0515-0004-L	30	23	25.4	25.8	6	Yes	
0515-0005	50.8	34	38.1	42.5	9	No	
0515-0005-L	50.8	34	38.1	42.5	9	Yes	
0515-0006	76.2	46.8	50.8	62	10	No	
0515-0006-L	76.2	46.8	50.5	62	10	Yes	







Cage Code: 1N2U3
ISO 9001: 9015 Certified









accredited by the ANSI National Accreditation Board attests that:

5281 Clyde Park Ave. SW, Suite 1 Wyoming, MI 49509 USA www.asrworldwide.com 616-942-6273



TOWER OPTICAL CORPORATION

American Systems Registrar, LLC, a provider of third-party system registration and

3600 S. CONGRESS AVENUE UNIT J BOYNTON BEACH, FL 33426

with a scope of:

MANUFACTURE, SALES AND MARKETING OF PRECISION **OPTICS**

has established a quality management system that is in conformance with the International Quality System Standard

ISO 9001:2015

ASR Certificate Number:

Date of Certification:

Date of Certification Expiration:

Date of Initial Registration: Revision:

Re-Issue Date:

6418

February 6, 2022

February 5, 2025

March 28, 2007

CERTIFICATE OF REGISTRATION



www.TowerOptical.com

3600 South Congress Ave., Unit J, Boynton Beach, FL 33426 phone 561-740-2525 • fax 561-740-2518 www.toweroptical.com • sales@toweroptical.com

Cage Code: 1N2U3

SDVO-SB

ITAR Compliant

© 2010 Tower Optical Corporation / All rights reserved

Specifications and prices subject to change without notice.

37